

Manual

Inclination sensor with Profibus-DP interface

Firmware Version 1.00 and up

Contents

	Page
1. Introduction	3
1.1. Scope of delivery	3
1.2. Product assignment	3
2. Safety and operating instructions	4
3. Profibus-DP	5
4. Operating parameters of the inclination sensor	6
5. Data exchange between Profibus-DP devices	7
5.1. Telegram structure	7
5.2. Initialization, restarting and user data communication	7
6. Parameterization and configuration	8
6.1. Parameterization	8
6.2. Configuration	10
6.3. Significance of diagnostic data Slave_Diag	11
6.4. User data	12
6.5. Inclination angle readout	12
6.6. Preset function	14
6.7. Offset function (not possible for the 360° sensor)	14
7. Terminal assignment and commissioning	16
7.1. Mechanical mounting	16
7.2. Electrical connection	17
7.2.1. Setting the user address (Node ID)	17
7.2.2. Terminating resistor	17
7.2.3. Electrical connection of the inclination sensor	18
7.2.4. View inside the inclination sensor	18
7.2.5. Terminal assignment	19
7.2.6. Status indicating elements (LEDs)	19
7.2.7. Profibus cable	19

Disclaimer of liability

The present manual was compiled with utmost care, errors and omissions reserved. For this reason Baumer IVO GmbH & Co. KG rejects any liability for the information compiled in the present manual. Baumer IVO nor the author will accept any liability for direct or indirect damages resulting from the use of the present information.

At any time we should be pleased receiving your comments and proposals for further improvement of the present document.

Registered trademarks

PROFIBUS, the PROFIBUS Logo and PROFIdrive are registered trademarks of the PROFIBUS user organization respectively of PROFIBUS International (PI). These and other names applied in the present manual that at the same time are registered trademarks are not correspondingly marked. Having omitted the respective marking does not necessarily imply that the names are not registered trademarks or that there are no existing patents and protected patented designs.

1. Introduction

1.1. Scope of delivery

Please check the delivery upon completeness prior to commissioning. Depending on encoder configuration and part number delivery is including:

- Encoder
- Describing file and manual (available as download in the Internet)

1.2. Product assignment

Product	GSD file	Product family
GNAMG.x213Pxx	GNAMG_15.gsd	Inclination sensor
GNAMG.x223Pxx	GNAMG_30.gsd	Inclination sensor
GNAMG.x233Pxx	GNAMG_60.gsd	Inclination sensor
GNAMG.x153Pxx	GNAMG360.gsd	Inclination sensor



Fig.: Inclination sensor on base plate

2. Safety and operating instructions

Supplementary information

- This manual is intended as a supplement to already existing documentation (e.g. catalogue, product information and mounting instruction).
- The manual must be carefully read prior to initial commissioning of the equipment.

Intended purpose of the equipment

- The inclination sensor is a precision sensing device. It is expressly used to determine inclination angles and to prepare and supply measured values in the form of electrical output signals for the downstream device. The inclination sensor must not be used for any other purpose.

Commissioning

- The inclination sensor may only be installed and mounted by qualified experts.
- Observe the operating instructions of the machine manufacturer.

Safety precautions

- Prior to commissioning the equipment, check all electrical connections.
- If installation, electrical connection or any other work performed at the inclination sensor or at the equipment is not correctly executed, this can result in malfunction or failure of the inclination sensor.
- Steps must be taken to exclude any risk of personal injury, damage to operating or corporate equipment as a result of an inclination sensor malfunction by providing suitable safety precautions.
- The inclination sensor must not be operated outside the limits (see detailed product information).

Failure to comply with the safety instructions can result in malfunctions, personal injury or damage to property!

Transport and storage

- Only ever transport or store the inclination sensor in its original packaging.
- Never drop the inclination sensor or expose it to major shocks.

Mounting

- Avoid impacts or shocks on the housing.
- The bus cover must fully rest against the base plate when mounted. Any tolerances in assembling the bus cover onto the base plate may have a negative impact on the absolute inclination angle.

Electrical commissioning

- Do not proceed any electrical modifications at the inclination sensor.
- Do not carry out any wiring work when the inclination sensor is live.
- Never plug or unplug the electrical connection when the inclination sensor is live.
- Make sure that the entire system is installed in line with EMC requirements. Ambient installations and cabling affect the electromagnetic compatibility of the inclination sensor. Install inclination sensor and supply cables separately or far away from cables with high interference emissions (frequency converters, contactors, etc).
- Arrange for separate power supply of the inclination sensor where working with consumers that have high interference emissions.
- Completely shield the inclination sensor housing and connecting cable.
- Connect the inclination sensor to protective earth (PE) using shielded cable. The braided shield must be connected to the cable gland or plug. Ideally, aim at bilateral connection to protective earth (PE), the housing via the mechanical assembly, the cable shield via the downstream devices. In case of earth loop problems, earth on one side only as a minimum requirement.

Failure to observe these instructions can result in malfunctions, personal injury or damage to property!

3. Profibus-DP

General information

Bus systems are connecting configurations that generate communication between several components. Profibus DP is a manufacturer-independent open communication system for applications in the fields of production, process and industrial building automation. It is broken down into three variants:

- Profibus FMS for data communication between controls on the production and process management level.
- Profibus PA for process engineering applications.
- Profibus DP for fast data exchange between control units and decentralized peripherals in process automation.

The Profibus system comprises the following device types:

- DP master class 1 (DPM1) is a control for cyclic information exchange with a DP Slave.
- DP master class 2 (DPM2) is a programming or project processing device or operating equipment.
- DP Slave is a peripheral that reads in output data and passes input data onward to a PLC.

The Profibus system is broken down into a monomaster system and a multimaster system by the number of active masters during the operating phase.

- In a monomaster system, only one master class 1 and the DP slaves are active in the bus.
- In a multimaster system, several masters and the DP slaves are active in the bus. The masters can optionally either belong to class 1 or class 2.

Profibus-DP is characterized by the following properties:

- Short response times (1 ms with 32 users und 12 MBaud)
- Reliable transmission procedure (Hamming distance 4)
- Availability of a wide range of standardized system components
- Good diagnostic capability
- Simply handling and facility for upgrading
- User-oriented bus system
- Open system

Profibus-DP ist standardized by EN 50170 Vol. 2. This standard defines the communication and user profiles. User profile for the interface converter is profile 1.1. The user profile is differentiated in relation to the number of supported functions according device class 1 and 2. Device class 2 provides a greater number and comprises all the functions of class 1. Parameterization and preset functions are supported only by class 2. The device supports both class 1 and 2.

GSD file

The device master data file (GSD-file) is a descriptive file describing all required operating data of the Profibus user. The data itself are also filed in the ROM of the user. The data can be subdivided into two sections:

- General definitions contain information such as the manufacturer's name, product name, ident number, Profibus-specific parameters and baud rates.
- Application-related configurations include information relating to configuration options, parameters, parameter descriptions, hardware and software status and diagnostic capabilities.

Format and contents are defined in standard EN 50170.

The GSD file's ident number is 059B for all described products. The GSD file is prior condition for parameterization and configuration of the inclination sensor by a configuration tool.

4. Operating parameters of the inclination sensor

Explanations on operating parameters

Parameter	Significance
Resolution	Resolution of the inclination angle 0.001° = 0001h (not possible for the 360° sensor) 0.01° = 000Ah (not possible for the 360° sensor) 0.1° = 0064h 1.0° = 03E8h
Preset value X-axis (Slope lateral preset value)	The actual inclination value of the X-axis is set to a requested value
Preset value Y-axis (Slope long preset value)	The actual inclination value of the Y-axis is set to a requested value (not possible for the 360° sensor)
Offset X-axis (Slope lateral offset)	The here entered value is directly added to the actual inclination value of the X-axis (not possible for the 360° sensor)
Offset-value (Slope long offset)	The here entered value is directly added to the actual inclination value of the Y-axis (not possible for the 360° sensor)

5. Data exchange between Profibus-DP devices

5.1. Telegram structure

The diagram shows the telegram structure.

Telegram structure

DP Master	Request telegram			DP Slave
	Footer info	Output data	Header info	
	Response telegram			
	Header info	Input data	Footer info	

5.2. Initialization, restarting and user data communication

Prior to user data exchange between master and slave every slave is re-initialized. The master transmits parameterization and configuration data to the slave. Only when parameterization and configuration data are congruent to the data stored in the slave the user data exchange is proceeded in the following way:

Diagnostic request from master

The master transmits a Slave Diagnosis Request (Slave_Diag), the Slave replies by a Slave Diagnosis Response.

The master utilizes this data to check whether the slave exists in the bus and is ready for parameterization and configuration.

Slave parameterization

The master transmits a Slave Parameter Request (Set_Prm).

By the parameterization data the slave receives information about current bus parameters, monitoring times and slave-specific parameters. During the project processing phase the parameters are partially adopted directly or indirectly from the GSD file. The slave compares this parameterization with its own stored data.

Slave configuration

The master transmits a Check Configuration Request (Chk_Cfg).

The master informs the slave of amount (number of data bytes) and structure (data consistency) of the input and output ranges to be exchanged. The slave compares this configuration with its own configuration.

Diagnosis request prior to data exchange

The master transmits another Slave Diagnosis Request (Slave_Diag), the slave replies by a Slave Diagnosis Response.

Now the master is checking whether parameterization and configuration are congruent with the data stored in the slave. If the data requested by the master are admissible and no error has occurred, the slave is signalling its readiness for user data transfer by help of the diagnosis data.

Data Exchange

The slave will only respond to the master it was parameterized and configured by.

The master transmits a user data request (Data_Exchange), the slave replies by a user data response informing the master whether current diagnostic results are available. The slave will not transmit the true diagnostic and status information until a diagnostic telegram by the master is received.

6. Parameterization and configuration

6.1. Parameterization

Parameterization refers to transfer of information required by the slave for process data exchange. The information comprises Profibus-specific data (octet 1 to 6) as well as user-specific information. User-specific information can be entered via an input window during the project processing phase.

The data received from master are compared by the slave with the data it has stored. However, the slave will only inform the master of the result in the diagnosis request after configuration.

Parameter description for the parameterization function (Set_Prm)

Parameter	Octet Nr.	Significance
Station status	1	Definition of profibus-specific data <ul style="list-style-type: none"> • Sync mode/freeze mode active • Response monitoring active • Master assigned
Response monitoring time	2 to 3	Recognition of master failure, master must respond within this time
Min. Station Delay Responder (tsdr)	4	Minimum time the slave has to wait until it is allowed to respond to a master's request
Ident_No.	5 to 6	Device identifier, unique for each device type, defined and reserved by the PNO
Group_Ident_No.	7	Profibus-specific data
Operating parameter	8	Profibus-specific data
Parameters of the inclination sensor	9	Definition of application-specific data <ul style="list-style-type: none"> • Inversion of the inclination angles of the axis • Scaling function • Standard diagnosis/ extended diagnosis • Resolution
Resolution	10	Parameter location for four optional resolutions

Parameter values of parameterization function (Set_Prm)

Parameter	Data type	Octet Nr.	Value range	Default parameter in GSD file
Station status	Octet string	1		<ul style="list-style-type: none"> • Sync and freeze mode supported • Supported baud rates
Response monitoring time	Octet string	2 to 3		Profibus-specific data
Minimum Station Delay Responder	Octet string	4		Depending on Baud rate
Ident No.	Octet string	5 to 6		059B
Group Ident No.	Octet string	7		00
Operating parameter	Octet string	8		Profibus-specific data
Parameters of the inclination sensor	Octet string	9	<ul style="list-style-type: none"> • Bit 0 = 0/1 inversion X-axis • Bit 1 = 0/1 inversion Y-axis • Bit 2 = 0/1 scaling X-axis • Bit 3 scaling Y-axis • Bit 4 = 0/1 standard diagnosis/ extended diagnosis 	<ul style="list-style-type: none"> • less inversion • less inversion • less scaling • less scaling • extended diagnosis
Resolution	Octet string	10	0x00 to 0x03 0x00 = 0.001° Resolution 0x01 = 0.01° Resolution 0x10 = 0.1° Resolution 0x11 = 1.0° Resolution	Default = 0x10 = 0.1°

6.2. Configuration

Configuration means definition of type, length (amount) and direction of the process data as well as the way they are further processed. The type stipulates the data type and whether the data are contiguous (consistent). The length (amount) determines the number of data bytes available. The data direction defines whether data are transferred from master to slave or vice versa. The length comprises optionally one or two words, both of consistent data. The configuration is compared to the configuration stored in the slave. The slave informs the master of the result in the following diagnosis request. Angular values by the inclination sensor are input data from the master's point of view, values as preset or offset are output data.

Admissible configurations

Configuration	Significance
0xF1,0xD1,0xA0	2 words input data of data consistency for angular values of the inclination sensor, 1 word output data for parameterization of resolution/offset/preset in Data Exchange Mode

Diagnostic messages

Diagnostic messages contain information on the respective status of the inclination sensor. Diagnostic messages comprise Profibus-relevant information as well as device-specific information. Utilizing this information the master either controls slave communication or passes the information over to the higher-level system.

The master requests diagnostic data prior to both parameterization and configuration. Thus it is ensured that the slave exists in the bus and the data saved in the control's software are congruent to the data stored in the slave. Furthermore the slave is able to transmit a diagnostic incident in Data_Exchange Mode. The master will then request the diagnostic data.

The status indicators (DUO LED red/green) integrated in the bus cover visualize part of this information.

6.3. Significance of diagnostic data Slave_Diag

Diagnostic data	Octet Nr.		Significance
Station status 1	1	1	Status of <ul style="list-style-type: none"> Parameterization Configuration Diagnostic data (Diag.ext. Bit and Diag.stat. bit in case of alarm and warning signals)
Stations tatus 2	2	2	Status of <ul style="list-style-type: none"> Response monitoring Freeze or sync mode
Stations tatus 3	3	3	Not supported
Diag_Master	4		Address of the master having parameterized the slave first
Ident_no.	5 bis 6		Recognition of the device <ul style="list-style-type: none"> Unique for each device type Defined and reserved by the PNO
Extended Diagnosis header	7		Length of the extended diagnosis including diagnosis header byte in case of extended diagnosis
Operating parameter	8		According to parameterization
Alarms	9		At present no alarms are supported.
Supported Alarms	10		Defining the supported alarms
Warnings	11		At present no warnings are supported.
Supported Warnings	12		Defining the supported warnings
Firmware Version	13,14	7-8	Firmware version number
MAX limit positive	15-18		Maximum positive limit range (33 / 330 / 3300 / 33000)
MAX limit negative	19-22		Maximum negative limit range (-33 / -33 / -3300 / -33000)
Calibration Value X-high	23,24	10-13	Calibration value X-axis (max)
Calibration Value X-low	25,26	14-17	Calibration value X-axis (min)
Calibration Value Y-high	27,28	18-21	Calibration value Y-axis (max)
Calibration Value Y-low	29,30	22-25	Calibration value Y-axis (min)
Serial number	31-34	26-29	Serial number of inclination sensor
Offset X	35-38	30-33	Programmed offset X-axis
Offset Y	39-42	34-37	Programmed offset Y-axis
Preset X	43-46	38-41	Programmed preset X-axis
Preset Y	47-50	42-45	Programmed preset Y-axis
Resolution	51-52	46,47	Presently selected resolution

6.4. User data

Contrary to diagnostic data, user data refer directly to the process being controlled or monitored. Regarding the inclination sensor, user data are both the inclination data of the two axes that are transmitted via Profibus to the control (master), and second maybe a preset or offset value. Significance is as follows:

Preset: The inclination sensor can be preset to a certain angular value.

Offset: A predefined angular value is added to the measured angular value.

User data are exchanged in Data_Exchange Mode, the general conditions for the exchange (for example resolution of the inclination sensor) are to be previously defined in the configuration.

By data exchange the slave informs the master in case a diagnostic incident occurred, the master will then request the actual diagnostic and status information.

For setting a preset, the master transmits to the slave the preset value (within the range from $-30000 \dots +30000$ to $-30 \dots +30$, depending on the selected solution). See also „preset function“.

In mode "Data Exchange" the DUO-LED in the bus cover is green continuous.

6.5. Inclination angle readout

Inclination angle readout is by two dual words each, since for each axis there are 4 bytes each to read-in.

Neigungswinkelwert X-Achse


Ausgangsdaten	Eingangsdaten	Anwenderdiagnose
76543210	76543210	76543210
1: 00 00000000 .	1: 00 00000000 .	1: 1D 00011101 .
2: 00 00000000 .	2: 00 00000000 .	2: 1C 00011100 .
3: 00 00000000 .	3: 00 00000000 .	3: 00 00000000 .
4: 00 00000000 .	4: 39 00111001 9	4: 00 00000000 .
5: 00 00000000 .	5: 00 00000000 .	5: 00 00000000 .
	6: 00 00000000 .	6: 00 00000000 .
	7: 00 00000000 .	7: 01 00000001 .
	8: B7 10110111 .	8: 00 00000000 .
		9: 00 00000000 .
		10: 00 00000000 .
		11: 01 00000001 .

Neigungswinkelwert Y-Achse

Taking for granted a previously parameterized resolution of 0.1° (not shown in the figure) the inclination angle of the X-axis in the above figure is: $39h = 57dez = 5.7^\circ$

Analogue calculation relating to the Y-axis = $B7h = 183dez = 18.3^\circ$

The inclination angle of the 360° inclinometer sensor release as x-axis. The Y-axis cannot transmit any value and therefore the Y-axis is always zero.

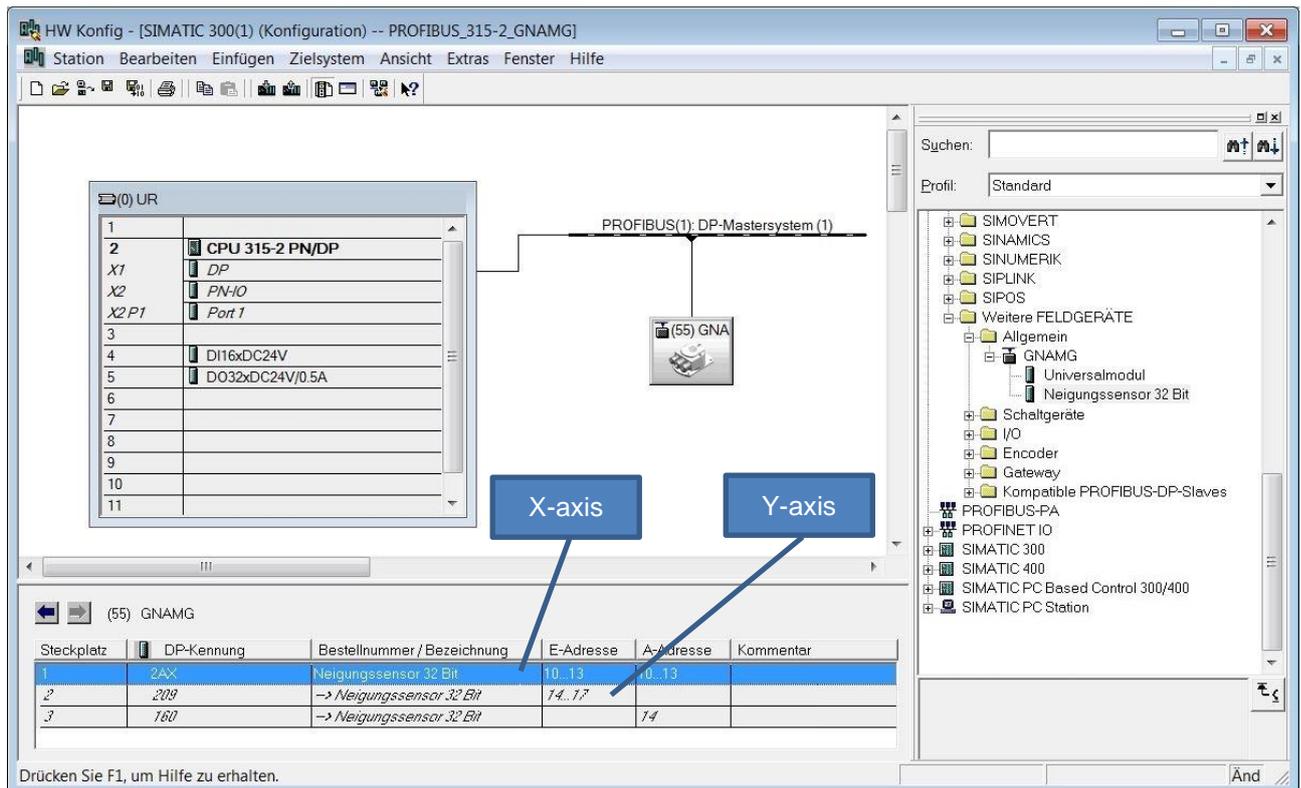

Steckplatz	DP-Kennung	Bestellnummer / Bezeichnung	E-Adresse	A-Adresse	Kommentar
1	2AX	Neigungssensor 32 Bit	10...13	10...13	
2	209	-> Neigungssensor 32 Bit	14...17		
3	160	-> Neigungssensor 32 Bit		14	

In case of angular data read-in by PLC and depending on parameterization, read-in of dual words must be in the hardware configuration. In the above example, the input dual words ED10 and ED14 are to be read in. For calculating the resulting inclination angle the previously defined resolution must be considered. According to the parameterized resolution, the same values of course represent different numerical values.

Overview on inclination values and the respective numerical values depending on the resolution:

Angle	Resolution	Hexadecimal value	Decimal value
1°	0.001°	00 00 03 E8	1000
1°	0.01°	00 00 00 64	100
1°	0.1°	00 00 00 0A	10
1°	1.0°	00 00 00 01	1
7.5°	0.1°	00 00 00 4B	75
30.34°	0.01°	00 00 0B DA	3034
12.345°	0.001°	00 00 30 39	12345
30.000°	0.001°	00 00 75 30	30000
180°	1.0°	00 00 00 B4	180
270°	0.1°	00 00 0A 8C	2700

6.6. Preset function

The control can transmit a preset value to the inclination sensor, thus setting the inclination sensor at the predetermined mechanical position to a defined position value. The preset must be within the programmed total sensing range depending on the selected resolution.

For optimum alignment of mechanical position and preset value, it is recommended to set the preset only when the inclination sensor is idle.

For setting the preset, the preset value is transmitted twice to the inclination sensor by the control: First with set most significant bit (MSB), second again with reset MSB. So to say, the MSB serves as „Clock“ bit. The first transmission is relevant for the time of adoption.

The set preset value must be within the limits of the parameterized resolution listed in the table below:

Sensor	Resolution	Minimum limit	Maximum limit
30°	0.001°	-30000	+30000
	0.01°	-3000	+3000
	0.1°	-300	+300
	1.0°	-30	+30

The corresponding two command sequences for the preset:



At the 360° sensor the X-axis must be write only!

Axis	With set MSB	With reset MSB
X -axis	10000101 (0x85)	00000101 (0x05)
Y-axis	10000110 (0x86)	00000110 (0x06)

Example: Reset of the inclination sensor X-axis (Preset value = 0)

Step 1:				(Command byte)
Output byte 10	Output byte 11	Output byte 12	Output byte 13	Output byte 14
00000000 (0x00)	00000000 (0x00)	00000000 (0x00)	00000000 (0x00)	10000101 (0x85)
Step 2:				
00000000 (0x00)	00000000 (0x00)	00000000 (0x00)	00000000 (0x00)	00000101 (0x05)

6.7. Offset function (not possible for the 360° sensor)

Utilizing the difference between actual position value and preset value the inclination sensor calculates for internal purposes a so-called offset value that normally is not relevant for the application. However, it is also possible to define a specific offset value that is added to the actual inclination value of the axis.

The procedure is the same as for setting the preset, and also the offset limits must be selected according to the parameterized resolution.

Sensor	Resolution	Minimum limit	Maximum limit
30°	0.001°	-30000	+30000
	0.01°	-3000	+3000
	0.1°	-300	+300
	1.0°	-30	+30

Both command sequences for the offset:

Axis	With set MSB	With reset MSB
X-axis	10010001 (0x91)	00010001 (0x11)
Y-axis	10010010 (0x92)	00010010 (0x12)

1. Example: Write offset on X-axis of the inclination sensor (offset= 5° at 1° resolution)

Step 1:				(Command byte)
Output byte 10	Output byte 11	Output byte 12	Output byte 13	Output byte 14
00000000 (0x00)	00000000 (0x00)	00000000 (0x00)	00000101 (0x05)	10010001 (0x91)
Step 2:				
00000000 (0x00)	00000000 (0x00)	00000000 (0x00)	00000101 (0x05)	00010001 (0x11)

To make clear the impact of the parameterized resolution, here is another example for writing the same offset value (5°) but with another selected resolution of the inclination sensor (0.01°).

2. Example: Write offset on X-axis of the inclination sensor (offset= 5° at 0.01° resolution)


Step 1:				(Command byte)
Output byte 10	Output byte 11	Output byte 12	Output byte 13	Output byte 14
00000000 (0x00)	00000000 (0x00)	00000001 (0x01)	11110100 (0xF4)	10010001 (0x91)
Step 2:				
00000000 (0x00)	00000000 (0x00)	00000001 (0x01)	11110100 (0xF4)	00010001 (0x11)

The offset is saved non-volatile in the EEPROM that provides at least 1 million writing cycles. However, by frequent preset setting operations induced by software or incidents the service life might be at its end rather quickly inspite of this very high number of writing cycles. At this point we recommend a certain carefulness in editing the control software.


7. Terminal assignment and commissioning

7.1. Mechanical mounting

- Release both fastening screws of the bus cover.
- Carefully loosen the bus cover from the base plate and lift off in the axial direction.
- Firmly screw the base plate in place using the fastening holes.
- The bus cover must fully rest against the base plate. Any tolerances in mounting the bus cover onto the base plate might affect the absolute inclination angle.
- Alignment of coordinates (y- / y+ / x- / x+) see following diagram.

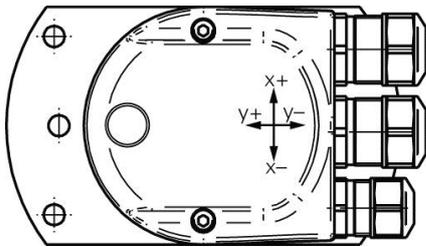

Installation position – sensing range 15°, 30° und 60°

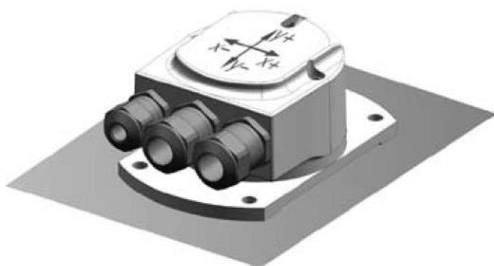

The two-dimensional inclination sensor with a sensing range of 15°, 30° and 60° must be mounted with the base plate in horizontal position, i.e. parallel to the horizontal line. The inclination sensor may also be installed upside down, i.e. turned by 180°.

The sensor can be inclined both in lateral (X-axis) and longitudinal (Y- axis) direction at the same time. For each axis a separate measured value is provided.

As default parameter the inclinometer will apply the selected sensing range to both the X and Y- axis, for example $\pm 15^\circ$ with the zero passage being precisely in the horizontal line.




Default 0°




Measured inclination -30°



Default 0°

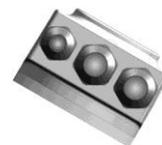


Measured inclination 30°

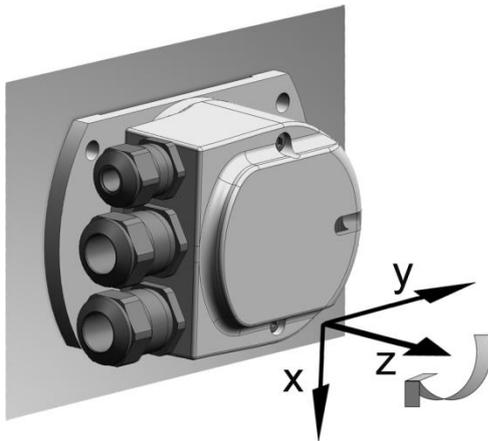Installation position - Sensing range 360°


The inclination sensor featuring a 360° sensing range must be installed in a way that the X-axis as in the illustration is in parallel alignment with gravity. The deflection may not be more than $\pm 3^\circ$. Please note that the inclination sensor must fully and evenly rest on the contact surface and whilst inclination/rotation must not be subject to any misalignment in the X- or Y-direction since this would affect the sensing accuracy.

The 360° inclination sensor default position is 0° as shown in the following illustration but may be optionally configured by help of the preset function.

The measuring direction may also be inverted. Default parameter of the inclinometer's sensing direction is clockwise from 0...360°, in case of active inversion counter-clockwise.

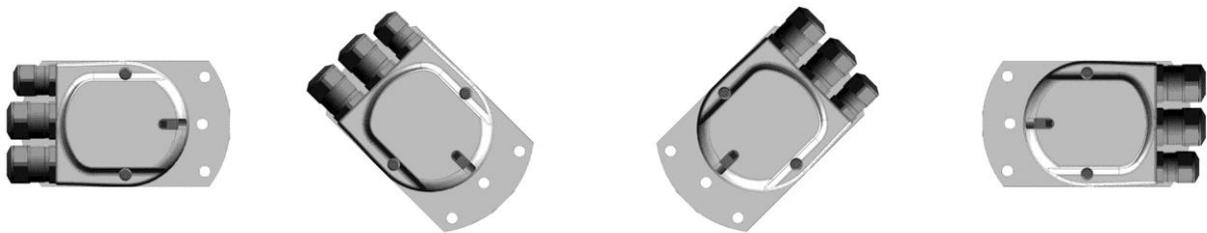

Default 0°

Measured inclination 45°

Measured inclination 135°

Measured inclination 180°

7.2. Electrical connection

The inclinometer must fully rest on the base plate and be firmly screwed in place.


For e-connection of the bus cover please proceed as follows:

- Release both fastening screws of the bus cover
- Carefully loosen the bus cover and lift off from the base plate in the axial direction.

7.2.1. Setting the user address (Node ID)

The user address (Node ID) is set decimally using two rotary switches in the bus cover. The maximum number of user is 99. The address is read in once only on Power ON.

- Setting the user address decimally using rotary switches 1 and 2 (Default 00).

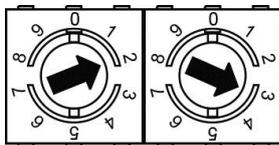

Beispiel: 23

7.2.2. Terminating resistor

If the connected Profibus user is the final device in the bus line the bus must be terminated by a resistor. The required resistors are integrated in the inclination sensor and are activated by a two-pole DIP switch.

- The final user must set the internal terminating resistors to „ON“ using the 2-pole DIP switch (default OFF).




Both ON = final user
Both OFF = user X

Clamp	Resistor
A to GND	390 Ohm
B to +5 V	390 Ohm
A to B	220 Ohm


7.2.3. Electrical connection of the inclination sensor

- Release the cap nut of the cable gland.
- Push the cap nut and seal insert with contact sleeve onto the cable sheath.
- Strip the cable sheath and cores, shorten the shield film where it exists (see illustration)
- Bend over the braided shield by approx. 90°.
- Push the sealing insert with contact sleeve along as far as the braided shield. Insert the sealing insert with contact sleeve and cable flush onto the cable gland and tighten the cap nut.

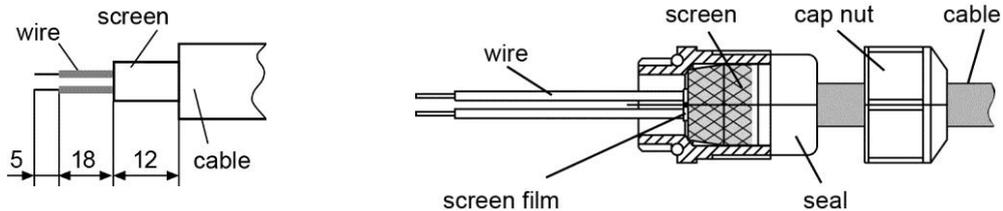

- Clamps of the same designation are internally connected to each other.
- For supply voltage use cable gland 3 only. For the bus lines, either optionally cable gland 1 or 2 may be utilized. Observe the admissible core-cross-sections.
- Guide the cores the shortest way from the cable gland to the terminal connector. Please observe the admissible core-cross-sections, use ferrules in case of flexible cores.
- Avoid any crossings of data lines and supply lines.
- Seal up the unused cable gland using a sealing bolt (included in the delivery)

7.2.4. View inside the inclination sensor

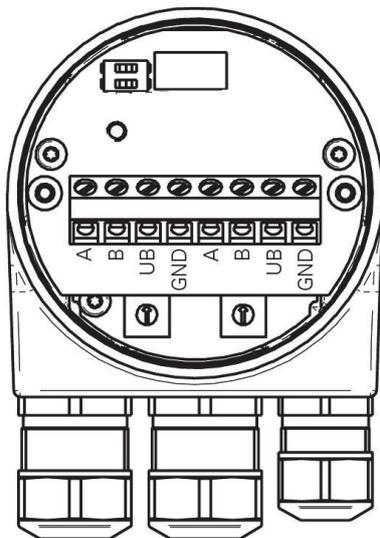


7.2.5. Terminal assignment


Pin M12	Terminal	Significance
Pin 1	UB	Supply voltage 10...30 VDC
Pin 3	GND	Ground terminal for UB
Pin 2	A	Negative serial data line
Pin 4	B	Positive serial data line

M12 connector

for serial data line




male



female

for power supply



Terminals the same designation are connected to each other internally and identical in their functions. The maximum load of the internal clamps UB-UB and GND-GND is 1 A each. (A and B are each isolated with 100 nH inductivity for 12 MBaud operation).

- Carefully press the cover of the inclination sensor over the sealing rubber, taking care not to tilt it. The cover must fully rest against the base plate.
- Tighten both the fastening screws firmly in the same direction.

The inclination sensor housing and braided shield of the connecting cable are only ideally connected if the cover is resting fully against the base plate (positive locking).

7.2.6. Status indicating elements (LEDs)

Bus cover provides at rear an integrated DUO LED.

Colour	Status
LED green continuous	Inclination sensor is in mode „Data Exchange“
LED yellow continuous	Inclination sensor in ramp-up status or less bus contact

7.2.7. Profibus cable

EN 50170 specifies two types of cables, A and B. Cable type B is obsolete and should no longer be used for new applications. With cable type A, all transmission rates up to 12 MBaud can be used.

Features	Data
Shaft resistance in Ohm	135 to 165 at 3 to 20 MHz
Operating capacity (pF/m)	Less than 30
Loop resistance (Ohm/km)	Less than 110
Core diameter (mm)	Greater than 0,64
Core cross section (mm)	Greater than 0,34

Transmission speed depending on cable length

Baud rate in kBaud	9,6	19,2	93,75	187,5	500	1500	3000	12000	
Cable length in m	1200	1200	1200	1000	400	200	100	100	